




## 3013ALQKS2 Series Shielded Toolless Keystone Jack Installation Instructions

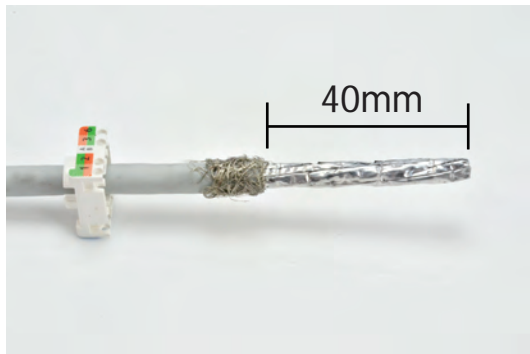


1. Insert the cable through the cap and strip the cable jacket length for about 40mm.  
Fold back the tinned copper braids.

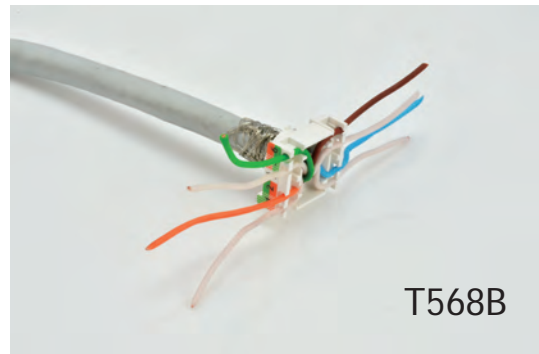


2. Remove the foil from each pair.  
Seat the wires into the cap according to the wire scheme.

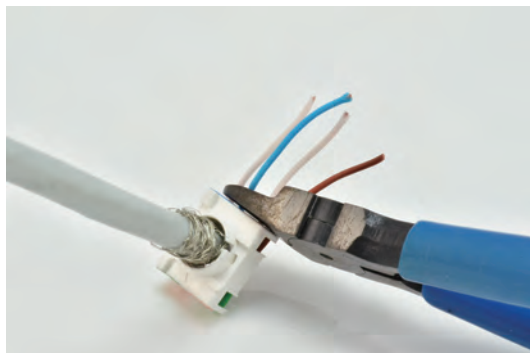

3. Trim the excess wires along the edge of the cap by using a diagonal cutter.

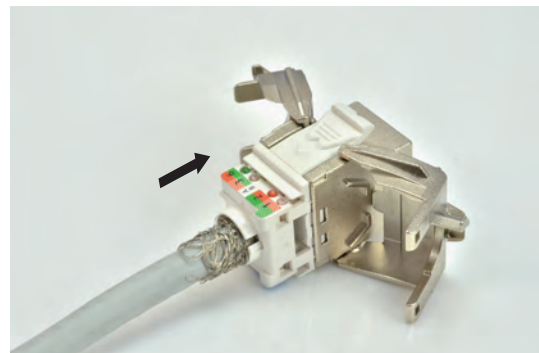

4. Press the cap toward the body.

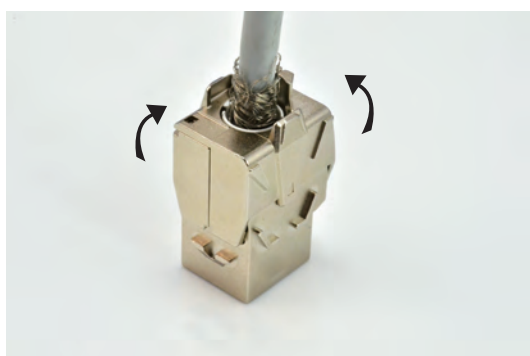

5. Terminate by pushing to close the 2 wings from both sides.



6. Use a cable-tie to fix the cable.  
Ensure that the copper braids touch the shield base closely.  
Completion.